


FPR Single Seal Assembly

Sizes: 757, 758

800-841-5001 www.fristam.com/usa

When replacing ANY seal part, it is important to replace ALL seal wear parts.

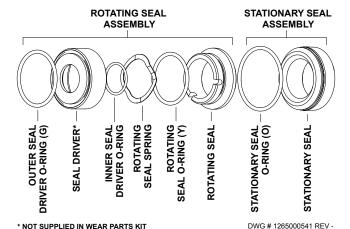

MANY SEAL KITS CONTAIN O-RINGS WITH COLORED DOTS TO INDICATE POSITION: (G)=GREEN; (Y)=YELLOW; (O)=ORANGE; (B)=BLUE

CARD DWG # 1265000403 REV B CARD PART # 1050000218




Engineered For Lasting Performance

800-841-5001 www.fristam.com/usa

FPR Double Seal Assembly Sizes: 757, 758

> When replacing ANY seal part, it is important to replace ALL seal wear parts.

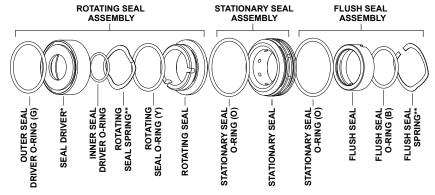

*NOT SUPPLIED IN WEAR PARTS KIT

**FLUSH SEAL SPRING HAS A WHITE STRIPE ON THE OUTSIDE EDGE; ROTATING SEAL SPRING DOES NOT

DWG # 1265000546 REV A

MANY SEAL KITS CONTAIN O-RINGS WITH COLORED DOTS TO INDICATE POSITION: (G)=GREEN; (Y)=YELLOW; (O)=ORANGE; (B)=BLUE

CARD DWG # 1265000402 REV A CARD PART # 1050000217


Sizes: 857, 858



FPR Single Seal Assembly Sizes: 857, 858

800-841-5001 www.fristam.com/usa

When replacing ANY seal part, it is important to replace ALL seal wear parts.

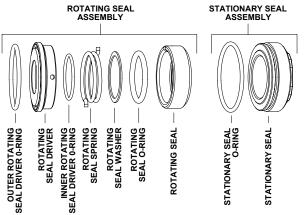

DWG #1265000685



800-841-5001 www.fristam.com/usa

ROTATING SEAL STATIONARY SEAL FLUSH SEAL ASSEMBLY ASSEMBLY FLUSH SEAL O-RING ROTATING SEAL SPRING FLUSH SEAL SPRING ROTATING SEAL DRIVER ROTATING SEAL O-RING OUTER ROTATING SEAL DRIVER 0-RING INNER ROTATING SEAL DRIVER 0-RING ROTATING SEAL WASHER ROTATING SEAL STATIONARY SEAL O-RING STATIONARY SEAL STATIONARY SEAL O-RING FLUSH SEAL DWG #1265000686



When replacing ANY seal part, it is important to replace ALL seal wear parts.


FPR Double Seal Assembly



FPR Single Seal Assembly

Size: 102

When replacing ANY seal part, it is important

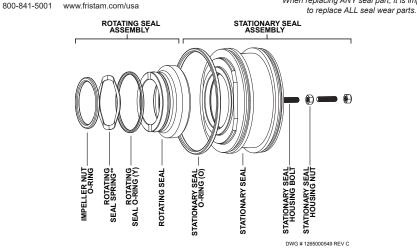

MANY SEAL KITS CONTAIN O-RINGS WITH COLORED DOTS TO INDICATE POSITION: (G)=GREEN; (Y)=YELLOW; (O)=ORANGE; (B)=BLUE

CARD DWG # 1265000405 REV B CARD PART # 1050000220




800-841-5001 www.fristam.com/usa

FPR Double Seal Assembly

Size: 102

When replacing ANY seal part, it is important to replace ALL seal wear parts.

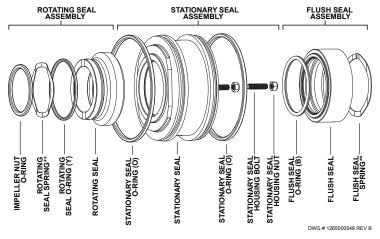

MANY SEAL KITS CONTAIN O-RINGS WITH COLORED DOTS TO INDICATE POSITION: (G)=GREEN; (Y)=YELLOW; (O)=ORANGE; (B)=BLUE

CARD DWG # 1265000404 REV A CARD PART # 1050000219




FPR Single Seal Assembly Size: 859

800-841-5001 www.fristam.com/usa

When replacing ANY seal part, it is important to replace ALL seal wear parts.

CARD DWG # 1265000703

CARD PART # 1050000327

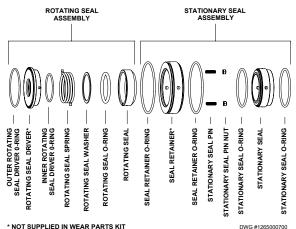


Engineered For Lasting Performance®

800-841-5001 www.fristam.com/usa

FPR Double Seal Assembly Size: 859

> When replacing ANY seal part, it is important to replace ALL seal wear parts.

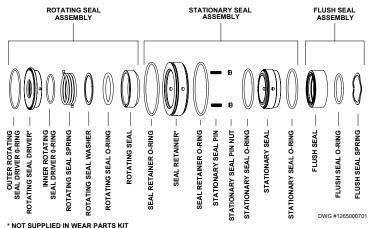




FPR Single Seal Assembly Size: 890

e: 890

800-841-5001 www.fristam.com/usa

When replacing ANY seal part, it is important to replace ALL seal wear parts.

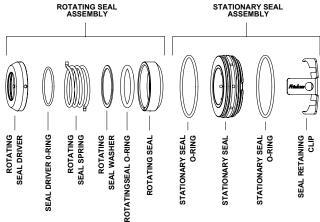

DWG #1265000719

MANY SEAL KITS CONTAIN O-RINGS WITH COLORED DOTS TO INDICATE POSITION: (G)=GREEN; (Y)=YELLOW; (O)=ORANGE; (B)=BLUE

CARD DWG # 1265000713 CARD PART # 1050000361



When replacing ANY seal part, it is important

to replace ALL seal wear parts.

FPR Double Seal Assembly

Size: 890

800-841-5001 www.fristam.com/usa

SEAL DRIVER O-RING

ROTATING SEAL WASHER

ROTATING SEAL WASHER

ROTATING SEAL WASHER

ROTATING SEAL O-RING

ROTATING SEAL O-RING

O-RING

STATIONARY SEAL

O-RING

O-RING

FLUSH SEAL

FLUSH SEAL

STATIONARY SEAL

O-RING

SEAL RETAINING

FLUSH SEAL

FLUSH SEAL

SPRING

MANY SEAL KITS CONTAIN O-RINGS WITH COLORED DOTS TO INDICATE POSITION: (G)=GREEN; (Y)=YELLOW; (O)=ORANGE; (B)=BLUE

CARD DWG # 1265000714 CARD PART # 1050000360